


TOSHIBA

**OWNER'S MANUAL
MANUEL DU PROPRIETAIRE
BETRIEBSANLEITUNG
MANUALE DEL PROPRIETARIO
MANUAL DEL PROPIETARIO
MANUAL DO UTILIZADOR
GEBRUIKSAANWIJZING
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
用戶手冊**



For commercial use
Pour usage commercial
Nur für gewerbliche Nutzung
Per uso commerciale
Para uso comercial
Para uso comercial
Voor commercieel gebruik
Για εμπορική χρήση
商用

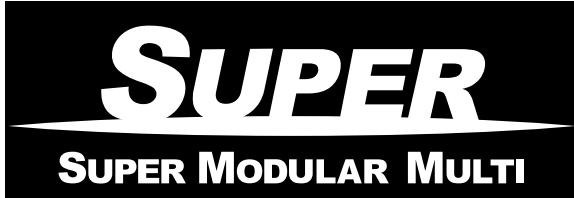

Indoor Unit

<4-way Air Discharge Cassette Type>

MMU-AP0091H, AP0121H, AP0151H,
MMU-AP0181H, AP0241H, AP0271H,
MMU-AP0301H, AP0361H, AP0481H
MMU-AP0561H

<2-way Air Discharge Cassette Type>

MMU-AP0071WH, AP0091WH, AP0121WH,
MMU-AP0151WH, AP0181WH, AP0241WH,
MMU-AP0271WH, AP0301WH
MMU-AP0481WH (CHINA market only)

<1-way Air Discharge Cassette Type>

MMU-AP0071YH, AP0091YH, AP0121YH,
MMU-AP0151SH, AP0181SH, AP0241SH

<Concealed Duct Standard Type>

MMD-AP0071BH, AP0091BH, AP0121BH,
MMD-AP0151BH, AP0181BH, AP0241BH,
MMD-AP0271BH, AP0301BH, AP0361BH,
MMD-AP0481BH, AP0561BH

<Concealed Duct High Static Pressure Type>

MMD-AP0181H, AP0241H, AP0271H,
MMD-AP0361H, AP0481H, AP0721H,
MMD-AP0961H

<Under Ceiling Type>

MMC-AP0151H, AP0181H, AP0241H,
MMC-AP0271H, AP0361H, AP0481H

<High Wall Type>

MMK-AP0071H, AP0091H, AP0121H,
MMK-AP0151H, AP0181H, AP0241H

<Floor Standing Cabinet Type>

MML-AP0071H, AP0091H, AP0121H,
MML-AP0151H, AP0181H, AP0241H

<Floor Standing Concealed Type>

MML-AP0071BH, AP0091BH, AP0121BH,
MML-AP0151BH, AP0181BH, AP0241BH

<Floor Standing Type>

MMF-AP0151H, AP0181H, AP0241H
MMF-AP0271H, AP0361H, AP0481H
MMF-AP0561H

Outdoor Unit

Cooling Only Model

<Inverter Unit>

MMY-MAP0501T8, MAP0601T8
MMY-MAP0801T8, MAP1001T8
MMY-MAP1201T8

Heat Pump Model


<Inverter Unit>

MMY-MAP0501HT8, MAP0601HT8
MMY-MAP0801HT8, MAP1001HT8
MMY-MAP1201HT8

Heat Pump Model

<Inverter Unit>

MMY-MAP0501HT7, MAP0601HT7
MMY-MAP0801HT7, MAP1001HT7
MMY-MAP1201HT7

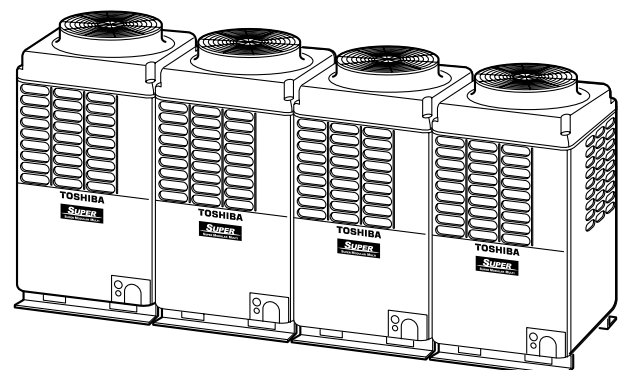

ADOPTION OF NEW REFRIGERANT

This Air Conditioner is a new type which adopts a new refrigerant HFC (R410A) instead of the conventional refrigerant R22 in order to prevent destruction of the ozone layer.

Thank you very much for purchasing TOSHIBA Air Conditioner. Please read this owner's manual carefully before using your Air Conditioner.

- Be sure to obtain the "Owner's manual" and "Installation manual" from constructor (or dealer).
Request to constructor or dealer
Please clearly explain the contents of the Owner's manual and hand over it.

UTILISATION DU NOUVEAU REFRIGERANT

Ce climatiseur est d'un type inédit qui utilise le nouveau réfrigérant HFC (R410A) au lieu du réfrigérant traditionnel R22, afin d'éviter la destruction de la couche d'ozone.

Nous vous remercions pour avoir choisi un climatiseur TOSHIBA. Veuillez lire attentivement ce Manuel du propriétaire avant d'utiliser votre climatiseur.

- Assurez-vous que le constructeur (ou le revendeur) vous remette le "Manuel du propriétaire" et le "Manuel d'installation".
Demande au constructeur ou au revendeur
Veuillez expliquer clairement le contenu du Manuel du propriétaire et le remettre au client.

EINFÜHRUNG EINES NEUEN KÜHLMITTELS

Dies ist ein neuartiges Klimagerät. Anstatt des herkömmlichen Kühlmittels R22 verwendet es das neue ozonschicht-schonende HFC Kühlmittel R410A.

Wir danken Ihnen, dass Sie sich für ein TOSHIBA Klimagerät entschieden haben.
Bitte lesen Sie diese Betriebsanleitung, bevor Sie Ihr Klimagerät benutzen, sorgfältig.
• Lassen Sie sich die "Betriebsanleitung" und das "Installations-Handbuch" unbedingt vom Installateur oder vom Lieferanten aushändigen.
Eine Bitte an den Installateur oder Lieferanten:
Bitte erklären Sie dem Käufer den Inhalt der Betriebsanleitung und händigen sie ihm aus.

ADOZIONE DI UN NUOVO REFRIGERANTE

Questo condizionatore d'aria è di un tipo nuovo che adotta un nuovo refrigerante HFC (R410A) al posto del refrigerante convenzionale R22, per prevenire la distruzione dello strato di ozono dell'atmosfera terrestre.

Grazie di aver acquistato un condizionatore d'aria TOSHIBA.
Prima di usare il condizionatore d'aria, leggere con attenzione questo manuale del proprietario.
• Si raccomanda di tenere a portata di mano il "Manuale del proprietario" e il "Manuale di installazione" ricevuti dal produttore (o dal rivenditore).
Richiesta al produttore o al rivenditore
Spiegare chiaramente il contenuto del Manuale del proprietario e consegnarne una copia all'utente.

ADOPCIÓN DE NUEVO REFRIGERANTE

Este aparato de aire acondicionado es un modelo reciente que incorpora el nuevo refrigerante HFC (R410A) en lugar del refrigerante convencional R22 para así evitar daños en la capa de ozono.

Muchas gracias por haber adquirido el aparato de aire acondicionado TOSHIBA.
Lea atentamente este manual del propietario antes de utilizar el aparato de aire acondicionado.
• Asegúrese de que el fabricante (o distribuidor) le proporcione el "Manual del propietario" y el "Manual de instalación".
Solicitud al fabricante o distribuidor
Explique con claridad el contenido del Manual del propietario y entréguelo al cliente.

ADOPÇÃO DO NOVO REFRIGERANTE

Este ar condicionado é um modelo novo que adota um novo refrigerante HFC (R410A) em vez do refrigerante convencional R22 para evitar a destruição da camada de ozono.

Muito obrigada por adquirir o Ar Condicionado TOSHIBA.
Leia atentamente este manual do utilizador antes de utilizar o seu ar condicionado.
• Não se esqueça de receber o "Manual do utilizador" e o "Manual de instalação" do fabricante (ou agente).
Pedido ao fabricante ou agente
Explique por favor o conteúdo do Manual do utilizador e entregue-o.

TOEPASSING VAN EEN NIEUW KOELMIDDEL

Deze airconditioner is een nieuwe type dat werkt met een nieuw koelmiddel HFC (R410A) in plaats van met het conventionele koelmiddel R22, als bijdrage om de aantasting van de ozonlaag te reduceren.

Hartelijk dank voor uw keuze voor een airconditioner van TOSHIBA.
Lees deze gebruiksaanwijzing zorgvuldig door voordat u de airconditioner gaat gebruiken.
• Zorg ervoor dat u zowel de 'gebruiksaanwijzing' als de 'installatiehandleiding' van de installateur (of leverancier) krijgt.
Verzoek aan de installateur of de leverancier
Leg de inhoud van de gebruiksaanwijzing duidelijk uit en overhandig de gebruiksaanwijzing nadien aan de klant.

ΥΙΟΘΕΤΗΣΗ ΝΕΟΥ ΨΥΚΤΙΚΟΥ

Το παρόν Κλιματιστικό είναι νέος τύπος που υιοθετεί νέο ψυκτικό HFC (R410A) στη θέση του συμβατικού ψυκτικού R22 προκειμένου να βοηθήσει στην προστασία του όζοντος.

Σας ευχαριστούμε πολύ που προτιμήσατε για την αγορά σας ένα Κλιματιστικό TOSHIBA.
Παρακαλούμε διαβάστε προσεχτικά τις οδηγίες χρήσης πριν από τη χρήση του Κλιματιστικού.
• Βεβαιωθείτε ότι ο κατασκευαστής (ή ο πωλητής) σας παρέδωσε και τις "Οδηγίες Χρήσης" και το "Εγχειρίδιο Εγκατάστασης".
Παράκληση για τον κατασκευαστή ή τον πωλητή
Παρακαλώ εξηγήστε με σαφήνεια τα περιεχόμενα των Οδηγιών Χρήσης και παραδώστε το.

采用新的冷媒

为了防止破坏臭氧层，本空调采用最新冷媒 HFC (R410A)，而非普通的冷媒 R22。

承蒙选购东芝空调，谨在此表示由衷的感谢。
使用本空调前，请熟读本用户使用手册。
· 必须向合同签订人(或 销售商)领取《用户手册》和《安装手册》。
对合同签订人或 销售商的要求：
请清楚地说明使用手册的内容，然后把使用手册交给用户。

CONTENTS

PRECAUTIONS FOR SAFETY	1	INSTALLATION	17
NAME OF EACH PART	3	MAINTENANCE	21
PARTS NAME OF REMOTE CONTROLLER	6	AIR CONDITIONER OPERATIONS AND PERFORMANCE	21
CORRECT USAGE	8	RE-INSTALLATION	22
ADJUSTMENT OF WIND DIRECTION	9	WHEN THE FOLLOWING SYMPTOMS ARE FOUND	23
TIMER OPERATION	16		

SOMMAIRE

MESURES DE SECURITE	25	INSTALLATION	41
NOM DE CHAQUE PIÈCE	27	ENTRETIEN	42
NOM DES PIÈCES DE LA TELECOMMANDE	30	FONCTIONNEMENT ET PERFORMANCES DU CLIMATISEUR	45
UTILISATION CORRECTE	32	REINSTALLATION	46
REGLAGE DU SENS DE SOUFFLAGE	33	EN PRÉSENCE DES SYMPTÔMES SUIVANTS	47
FONCTIONNEMENT PAR MINUTERIE	40		

INHALT

SICHERHEITSVORKEHRUNGEN	49	INSTALLATION	65
BEZEICHNUNGEN DER TEILE	51	WARTUNG	66
TEILEBEZEICHNUNG DER FERNBEDIENUNG	54	FUNKTIONEN UND LEISTUNG DES KLIMAGERÄTS	69
RICHTIGE HANDHABUNG	56	NEU-INSTALLATION	70
EINSTELLUNG DES LUFTSTROMS	57	VORGEHENSWEISE BEI FOLGENDEN SYMPTOMEN	71
ZEITBETRIEB	64		

INDICE

PRECAUZIONI PER LA SICUREZZA	73	INSTALLAZIONE	89
NOME DI OGNI PARTE	75	MANUTENZIONE	90
NOME DELLE PARTI DEL TELECOMANDO	78	OPERAZIONI E PRESTAZIONI DEL CONDIZIONATORE D'ARIA	93
USO CORRETTO	80	RE-INSTALLAZIONE	94
REGOLAZIONE DELLA DIREZIONE DELL'ARIA	81	QUANDO SI RISCOVTRANO I SINTOMI SEGUENTI	95
FUNZIONAMENTO CON TIMER	88		

CONTENIDO

PRECAUCIONES PARA SU SEGURIDAD	97	INSTALACIÓN	113
NOMBRE DE CADA COMPONENTE	99	MANTENIMIENTO	114
DESCRIPCIÓN DE LOS BOTONES DEL CONTROL REMOTO	102	FUNCIONES Y RENDIMIENTO DEL APARATO DE AIRE	
UTILIZACIÓN CORRECTA	104	CONDICIONADO	117
AJUSTE DE LA DIRECCIÓN DEL AIRE	105	REINSTALACIÓN	118
FUNCIÓNAMIENTO DEL TEMPORIZADOR	112	CUANDO SE DETECTAN LOS SIGUIENTES SÍNTOMAS	119

ÍNDICE

PRECAUÇÕES DE SEGURANÇA	121	INSTALAÇÃO	137
NOMES DE CADA PEÇA	123	MANUTENÇÃO	138
NOME DAS PEÇAS DO CONTROLADOR REMOTO	126	FUNCIÓNAMENTO E PERFORMANCE DO APARELHO DE AR	
UTILIZAÇÃO CORRECTA	128	CONDICIONADO	141
REGULAÇÃO DA DIREÇÃO DO VENTO	129	REINSTALAÇÃO	142
OPERAÇÃO DO TEMPORIZADOR	136	SE FOREM DETECTADOS OS SEGUINTES SINTOMAS	143

INHOUD

VOORZORGSMATREGELEN VOOR UW VEILIGHEID	145	DE TIMER GEBRUIKEN	160
BENAMINGEN VAN DE ONDERDELEN	147	INSTALLEREN	161
BENAMING VAN DE ONDERDELEN VAN		ONDERHOUD	162
DE AFSTANDSBEDIENING	150	BEDIENING EN WERKING VAN DE AIRCONDITIONER	165
CORRECT GEBRUIK	152	OPNIEUW INSTALLEREN	166
INSTELLEN VAN DE LUCHTSTROOMRICHTING	153	WANNEER DE VOLGENDE SYMPTOMEN AANWEZIG ZIJN	167

ΠΕΡΙΕΧΟΜΕΝΑ

ΠΡΟΦΥΛΑΞΕΙΣ ΓΙΑ ΑΣΦΑΛΕΙΑ	169	ΕΓΚΑΤΑΣΤΑΣΗ	185
ΟΝΟΜΑΣΙΑ ΤΟΥ ΚΑΘΕ ΕΞΑΡΤΗΜΑΤΟΣ	171	ΣΥΝΤΗΡΗΣΗ	186
ΟΝΟΜΑΣΙΑ ΤΜΗΜΑΤΩΝ ΤΟΥ ΤΗΛΕΧΕΙΡΙΣΤΗΡΙΟΥ	174	ΛΕΙΤΟΥΡΓΙΕΣ ΚΑΙ ΑΠΟΔΟΣΗ ΤΟΥ ΚΛΙΜΑΤΙΣΤΙΚΟΥ	189
ΟΡΘΗ ΧΡΗΣΗ	176	ΕΓΚΑΤΑΣΤΑΣΗ ΕΚ ΝΕΟΥ	190
ΡΥΘΜΙΣΗ ΤΗΣ ΚΑΤΕΥΘΥΝΣΗΣ ΤΟΥ ΑΝΕΜΟΥ	177	ΟΤΑΝ ΠΑΡΑΤΗΡΗΘΟΥΝ ΤΑ ΠΑΡΑΚΑΤΩ ΣΥΜΠΤΩΜΑΤΑ	191
ΛΕΙΤΟΥΡΓΙΑ ΧΡΟΝΟΔΙΑΚΟΠΤΗ	184		

目 录

安全注意事项	193	安 装	209
部件名称	195	维 护	210
遥控器部件的名称	198	空调设备操作和性能	213
正确的使用方法	200	再 安 装	214
风向调节	201	当出现以下症状时	215
定时器运转	208		

ENGLISH

FRANCAIS

DEUTSCH

ITALIANO

ESPAÑOL

PORTUGUÊS

NEDERLANDS

ΕΛΛΗΝΙΚΑ

中 文

PRECAUTIONS FOR SAFETY

⚠ WARNING

Warning on installation

Be sure to leave the installation work to the dealer or a store specializing.

The exclusive knowledge and technology are required for installation work.

Do not perform installation by yourself. If an incomplete installation is performed, a fire, electric shock, injury, or water leakage may be caused.

Be sure to use the products sold separately which are specified by us.

For the products sold separately, be sure to use those specified by us. Otherwise, a fire, electric shock, or water leakage may be caused. For installation work, leave it to special engineer.

When installing the units in a small room, take measures so that the refrigerant will not exceed the critical concentration if it leaks.



CAUTION

Related to countermeasures against the critical concentration, perform the installation work upon consultation with the dealer. If the refrigerant leaks and exceeds the critical concentration, oxygen deficiency may be caused.

Check whether earthing work is performed correctly.

A grounding is necessary. If the earthing work is incompletely, an electric shock may be caused. (For details, conform to the local regulation in each area.)

Warning on use

Do not expose your body directly in cool air for a long time, or do not cool you excessively.


It causes the worse of physical condition or trouble on health.

Never insert a finger or bar into the air inlet port or air outlet port of air.

Since the fan rotates in high speed inside of the unit, an injury may be caused.

When a trouble (burnt smell, etc.) is felt, stop the operation, turn off the power switch, and contact the dealer who you have purchased the air conditioner.

If keeping operation as the air conditioner is defective, a fire, electric shock, or trouble may be caused.

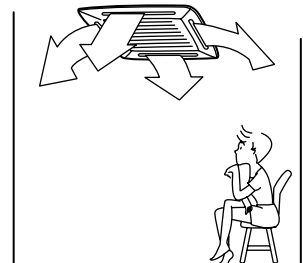

Warning on moving/repair

Never modify the air conditioner.

A fire or electric shock may be caused.

For repair, leave it to the dealer which you have purchased the air conditioner.

If an incomplete repair is performed, a fire or electric shock may be caused.

When moving or re-installing the air conditioner, contact the dealer which you have purchased the air conditioner or the special engineer.

If an incomplete installation is performed, a fire, electric shock, injury, or water leakage may be caused.



⚠ CAUTION**Caution on installation****Check the drain pipes are installed so that they can drain water securely.**

If the piping is incomplete, water leakage occurs resulted in moisture on furniture.

Check the earth leakage breaker is attached.

It is necessary to attach an earth leakage breaker. Otherwise, it causes an electric shock.

Check the air conditioner is installed at a place where flammable gas will not leak.

If gas leaks and accumulates in the unit surroundings, an outbreak of fire may be caused.

Check the outdoor unit is fixed on the base.

If it is not fixed securely on the base, an accident such as falling may be caused.

Check fixing method**Do not clean the air conditioner with water.**

An electric shock may be caused.

Do not put the combustible devices at a place where air from the air conditioner flows directly.

Imperfect combustion of the combustible devices may be caused.

Diligently ventilate the room when operating the air conditioner with the combustible devices.

If ventilation is incomplete, shortage of oxygen may be caused.

Check the installation plate, etc. is not damaged by use for a long time.

If leaving them damaged, the unit may fall resulted in injury, etc.

Do not put plants and animals at a place where air from the air conditioner flows directly.

Cause to affect on plants and animals may generate.

Do not put flammable spray, etc. near the air conditioner, or do not spray directly on the air conditioner.

A fire may be caused.

Do not put vessels including water such as a vase on the unit.






Moisture floods in the unit, the electric isolation deteriorates, and an electric shock may be caused.

Do not handle the switches with wet hands.

An electric shock may be caused.


Do not use the air conditioner for special purpose such as storage of foods, plants and animals, precise equipment, and art works.

Deterioration of quality may be caused.

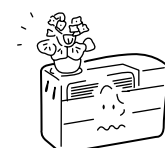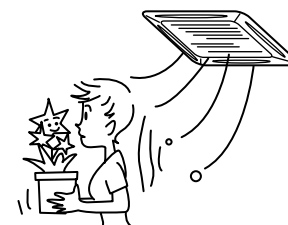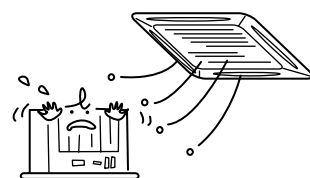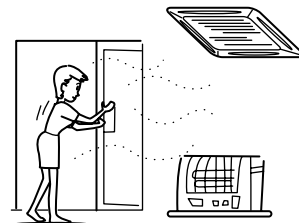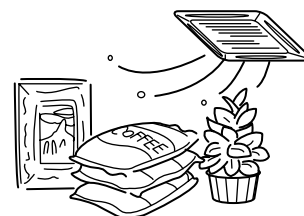


NAME OF EACH PART


Outdoor unit

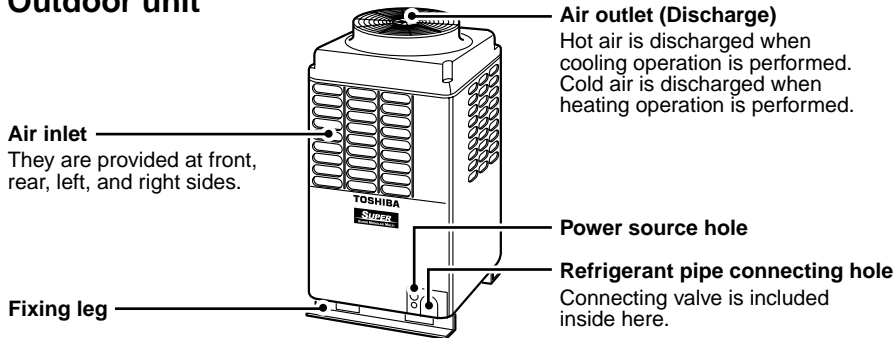

Indoor unit [4-way Air Discharge Cassette Type]

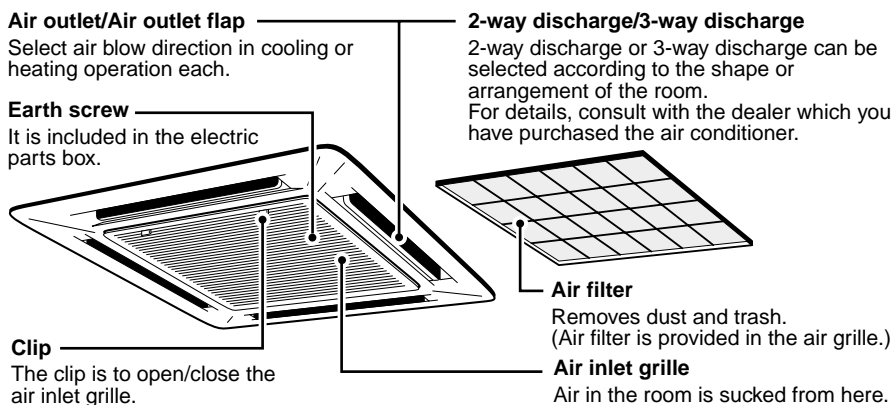


[2-way Air Discharge Cassette Type]

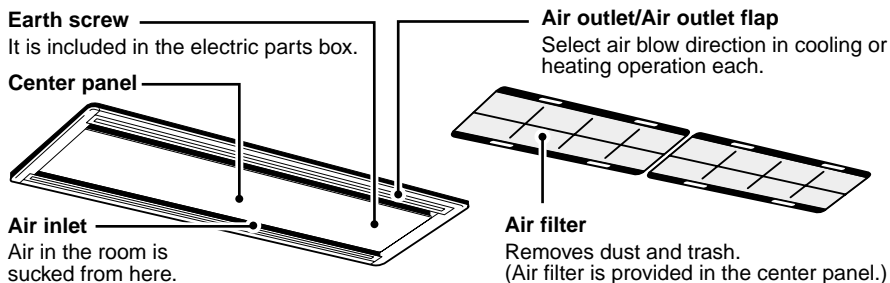

[1-way Air Discharge Cassette Type]


MMD-AP0071YH to AP0121YH MMD-AP0151SH to AP0241SH

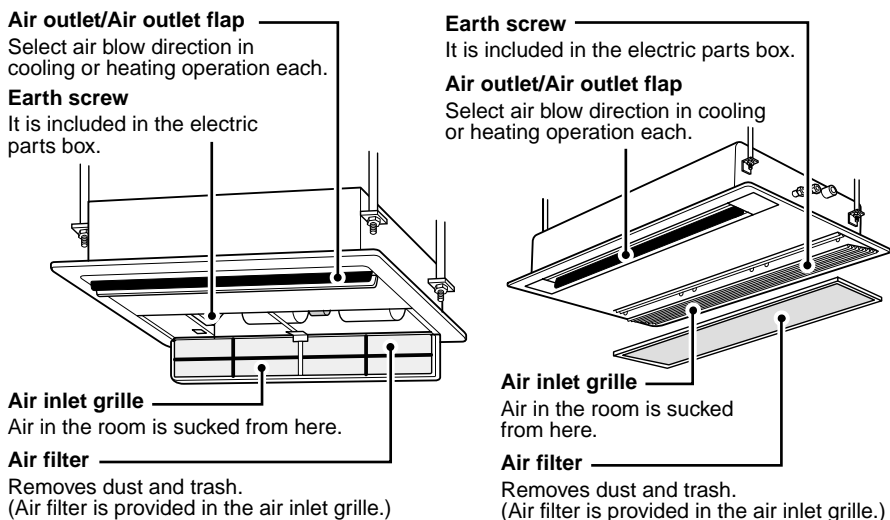

Sold Separately Parts


Main remote controller with timer

RBC-AMT21E

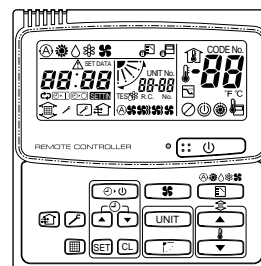


Sub-remote controller

RBC-AS21E

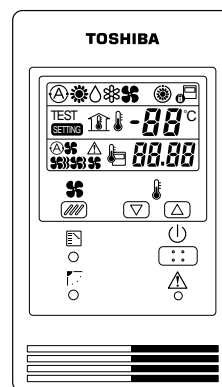


Wireless remote controller kit

RBC-AX22U(W)-E
RBC-AX22CE

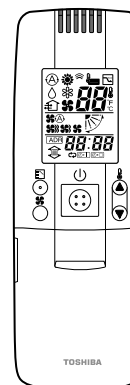


[Concealed Duct Type]

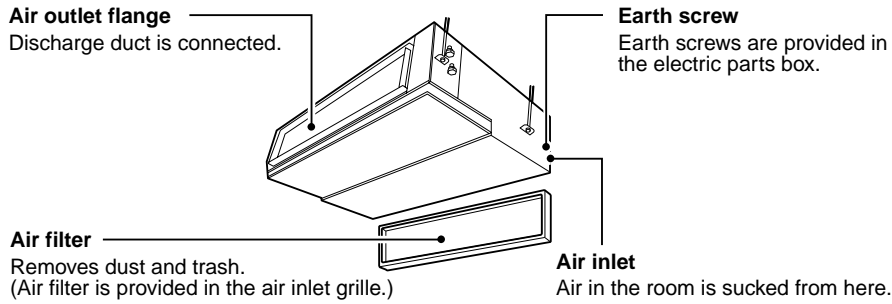


[Concealed Duct, High Static Pressure Type]

MMD-AP0181H to AP0481H


MMD-AP0721H, AP0961H

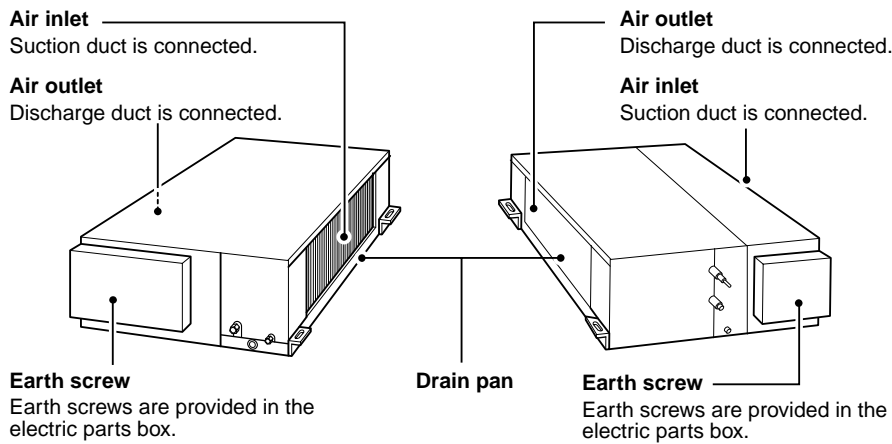


[Under Ceiling Type]

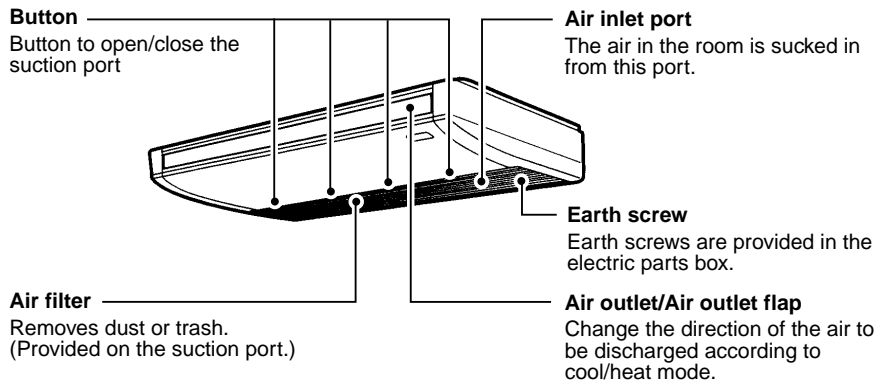


[High Wall Type]

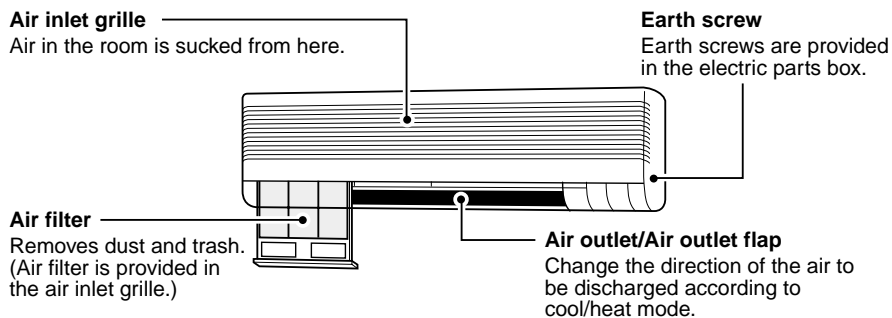


Weekly timer
RBC-EXW21E

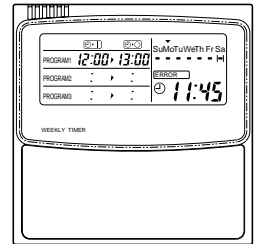


Central remote controller
TCB-SC642TLE

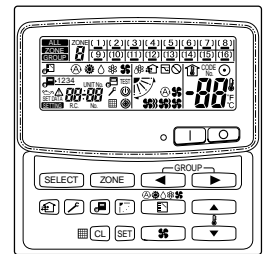


[Floor Standing Cabinet Type]

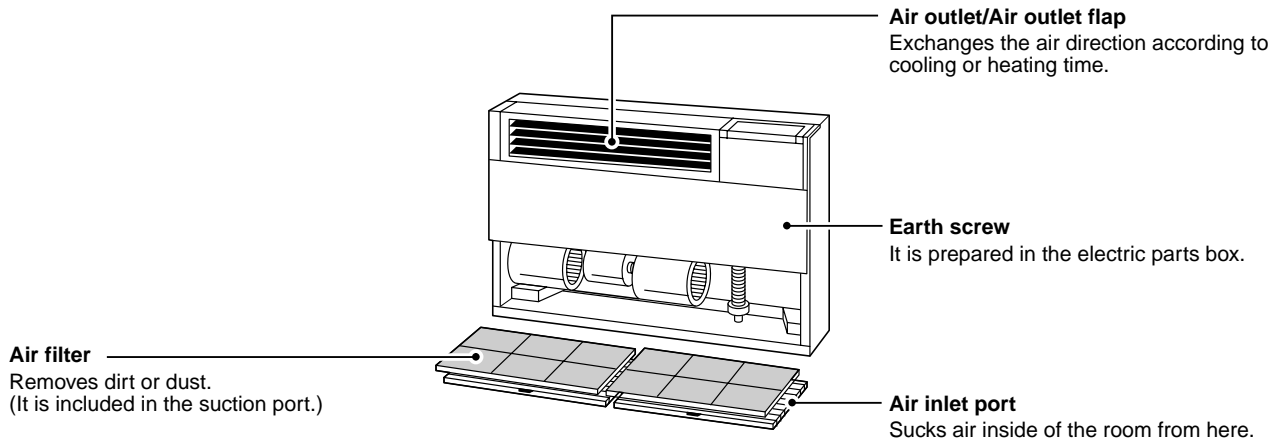

[Floor Standing Concealed Type]

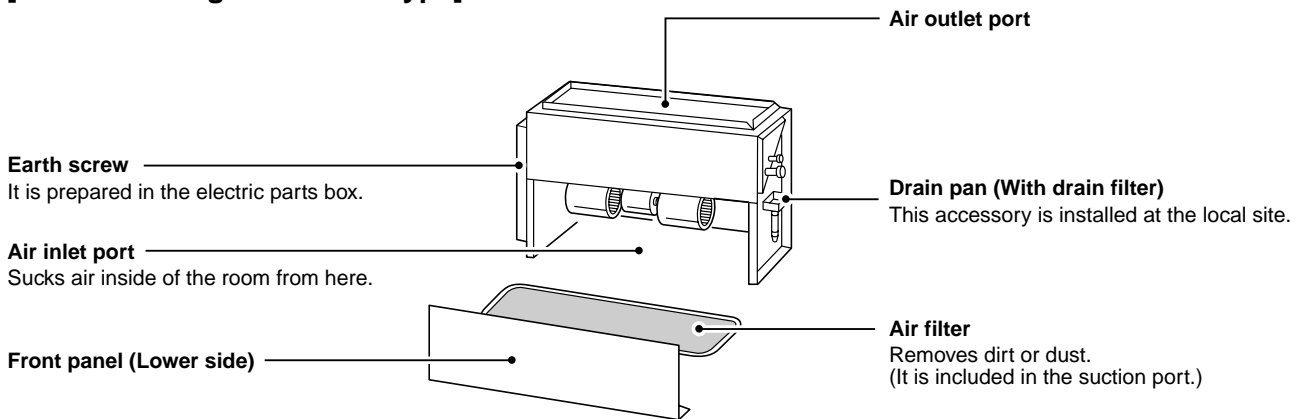

[Floor Standing Type]


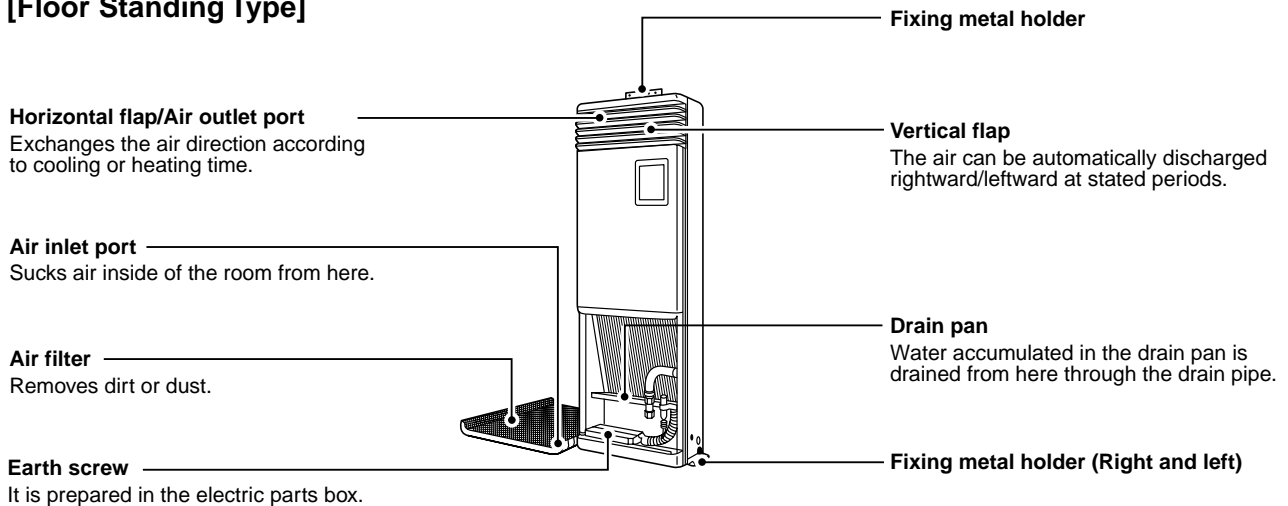


PARTS NAME OF REMOTE CONTROLLER

Display section

In the display example, all indicators are displayed for the explanation.
In reality only, the selected contents are indicated.

- When turning on the leak breaker at the first time, [SET DATA] flashes on the display part of the remote controller. While this display is flashing, the model is being automatically confirmed. Accordingly, wait for a while after [SET DATA] display has disappeared, and then use the remote controller.

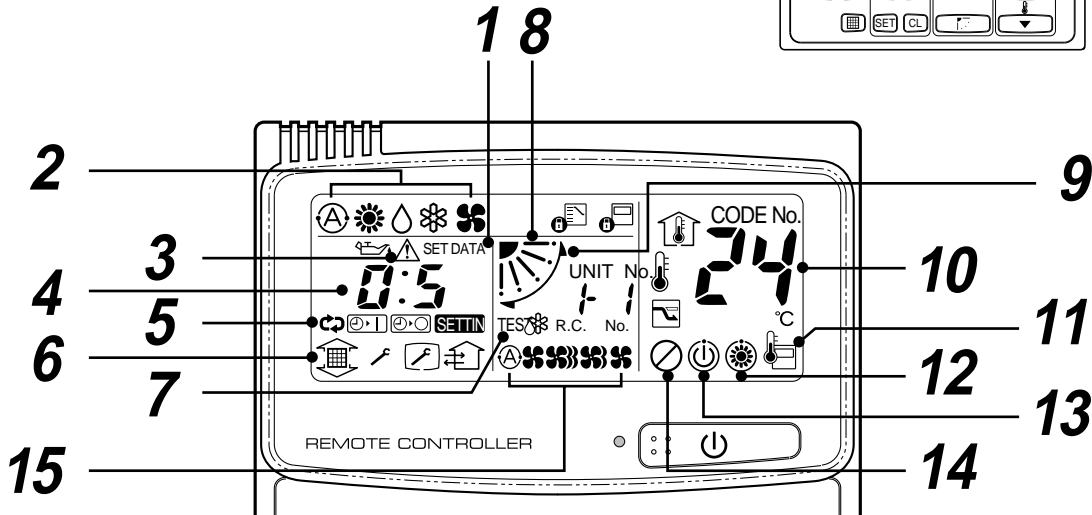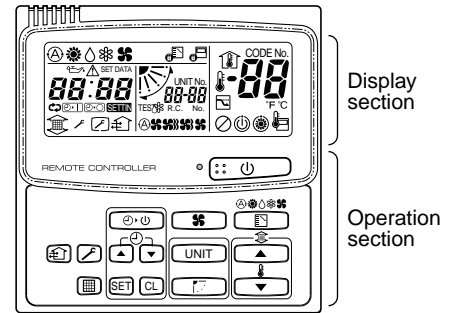

1 SET DATA display

Displayed during setup of the timer.

2 Operation mode select display

The selected operation mode is displayed.

3 CHECK display

Displayed while the protective device works or a trouble occurs.

4 Timer time display

Time of the timer is displayed.
(When a trouble occurs, the check code is displayed.)

5 Timer SETIN setup display

When pushing the Timer SETIN button, the display of the timer is selected in order of [OFF]
 → [OFF] repeat OFF timer → [ON]
 → No display.

6 Filter display

If "FILTER

7 TEST run display

Displayed during a test run.

8 Flap position display (for 4-Way Air Discharge Cassette Type and Under Ceiling Type model only)

Displays flap position.

9 SWING display

Displayed during up/down movement of the flap.

10 Set up temperature display

The selected set up temp. is displayed.

11 Remote controller sensor display

Displayed while the sensor of the remote controller is used.

12 PRE-HEAT display (for Heat-pump model only)

Displayed when the heating operation starts or defrost operation is carried out. While this indication is displayed, the indoor fan stops or the mode enters in LOW.

13 Operation ready display

Displayed when cooling operation is unavailable because heating operation is performed.

14 No function display

Displayed if there is no function even if the button is pushed.

15 Air volume select display

The selected air volume mode is displayed.


(AUTO)	
(HIGH)	
(MED.)	
(LOW)	


In the Concealed Duct High Static Pressure type models, [HIGH] only is displayed for the air speed.

Operation section

Push each button to select a desired operation.

This remote controller can operate the maximum 8 indoor units.

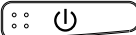- The details of the operation needs to be set up once, afterward, the air conditioner can be used by pushing  button only.

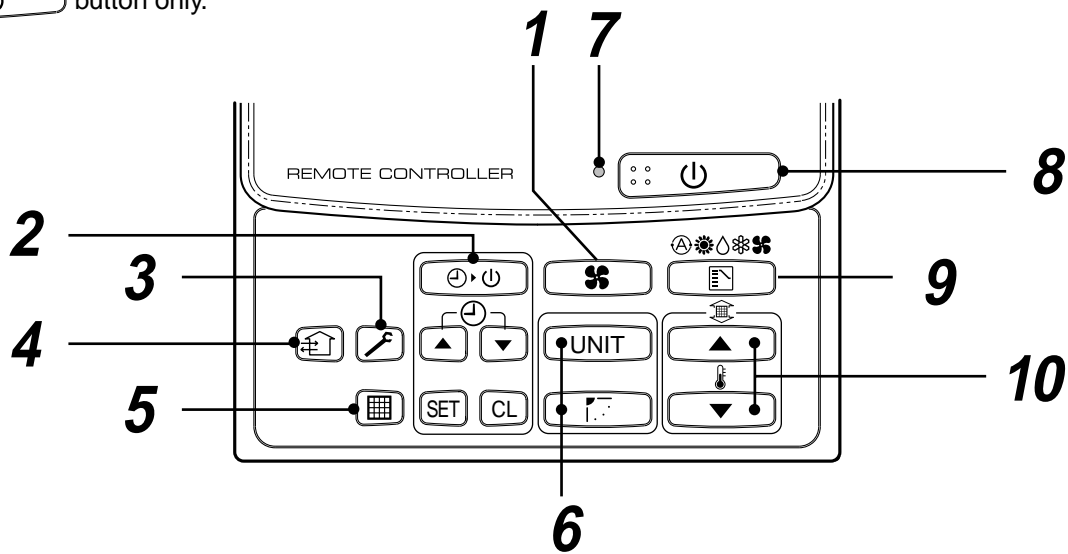

1 Air volume select button

Selects the desired air volume mode.
The Concealed Duct High Static Pressure type models cannot be operated.

2 Timer set button


TIMER SET button is used when the timer is set up.

3 Check button

The CHECK button is used for the check operation. During normal operation, do not use this button.

4 Fan button

FAN button is used when a fan which is sold on the market or etc. is connected.

- If  is displayed on the remote controller when pushing the FAN button, a fan is not connected.


5 Filter reset button

Resets (Erases) "FILTER " display.

6 Wind direction and Swing

 :

If the multiple indoor units are operated by only one remote controller, select the units when the air direction is adjusted.

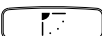 :

Set up the auto swing and angle of the flap.

- This function is not provided to Concealed Duct Standard Type, High Static Pressure Type, Floor standing Cabinet Type, or Floor Standing Concealed Type.

7 Operation lamp

Lamp is lit during the operation. Lamp is off when stopped.

Although it flashes when operating the protection device or abnormal time.

8 button

When the button is pushed, the operation starts, and it stops by pushing the button again.

When the operation has stopped, the operation lamp and all the displays disappear.



9 Operation select button

Selects desired operation mode.

10 Set up temperature button

Adjusts the room temperature.

Set the desired set temperature by pushing

 or .


OPTION :

Remote controller sensor

Usually the TEMP. sensor of the indoor unit senses the temperature. The temperature on the surrounding of the remote controller can also be sensed. For details, contact the dealer from which you have purchased the air conditioner.

- In case that one remote controller controls the multiple indoor units, the setup operation is unavailable in group control.

CORRECT USAGE


When you use the air conditioner for the first time or when you change the SET DATA value, follow the procedure below. From the next time, the operation displayed on the remote controller will start by pushing the  button only.


Preparation


Turn on the main power switch and/or the leakage breaker.

- When the power supply is turned on, a partition line is displayed on the display part of the remote controller.
- * After the power supply is turned on, the remote controller does not accept an operation for approx. 1 minute, but it is not a failure.

REQUIREMENT

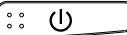- While using the air conditioner, operate it only with  button without turning off the main power switch and the leak breaker.
- Do not turn off the leak breaker while the air conditioner is used.
- Turn on the leak breaker 12 hours or more before start of operation after the air conditioner has stopped for a long time.

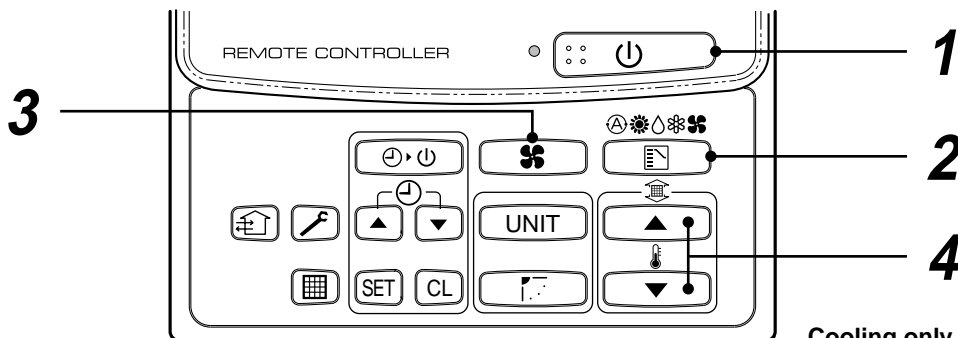

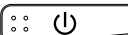1 Push  button.

The operation lamp goes on, and the operation starts.




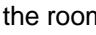

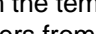

2 Select an operation mode with the  button.

One push of the button, and the display changes in the order shown on the right.


- This function is not provided to Concealed Duct High Static Pressure Type.

3 Select air volume with  button.



One push of the button, and the display changes in the order shown on the right.

- When air volume is "AUTO ", air volume differs according to the room temperature.
- In DRY  mode, "AUTO  is displayed and the air volume is LOW.
- In heating operation, if the room temperature is not heated sufficiently with volume "LOW  operation, select "MED.  or "HIGH  operation.
- The temperature which the temperature sensor detects is one near the air inlet of the indoor unit. Therefore it slightly differs from the room temperature according to the installation status. The setup value is a criterion of the room temperature. (Automatic air speed cannot be selected in FAN mode.)
- Air volume of function is not provided to "Concealed Duct High Static Pressure Type" but air speed "HIGH  only is displayed.

Cooling only model




Heat-pump model

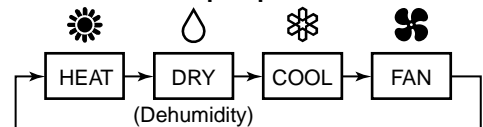

4 Determine the set up temperature by pushing the "TEMP.  or "TEMP.  button.

Stop

Push  button.

The operation lamp goes off, and the operation stops.

REQUIREMENT

[In Cooling operation]

- The operation starts after approx. 1 minute.

[In Heating operation (For Heat-pump model only)]

- In heating operation, the fan operation may continue for approx. 30 seconds after the air conditioner has stopped.
- The indoor fan continues preheat operation for 3 to 5 minutes under stop condition, and then blows out the hot air.
(☀ display on the remote controller display part goes on.)
- When temperature of the room has reached the setup temperature and the outdoor unit stops, the air speed becomes super low and the air volume extremely is lessened.
- In HEAT ☀ mode, if the room temperature reaches to the set temperature, the outdoor unit stops and the air flow becomes LOW and the air volume decreases.
- In the defrost mode, the fan stops so that cool air is not discharged and PRE-DEF ☀ is displayed.

ADJUSTMENT OF WIND DIRECTION

To increase the cooling or heating effect, be sure to use the discharge flap in the different directions in cooling or heating operation.

As the characteristics of the air, the cold air accumulates at lower side and hot air at upper side, respectively.

⚠ CAUTION

Set the louver horizontally in cooling operation.

If cooling operation is performed with downward discharge, the surface of the discharge port or louver will be wet with dew, and dewdrop may fall down.

REQUIREMENT

- If heating operation is performed with horizontal discharge, unevenness of temperature may increase in the room.

4-way Air Discharge Cassette Type


- While the air conditioner stops, the discharge flap automatically directs downward.
- While the air conditioner is in ready status for heating, the discharge flap directs upward.
The swinging operation starts after heating ready status has been cleared, but “SWING ↷” is displayed on the remote controller even if the status is ready to heating.

[In Cooling operation]

Use the discharge flap with horizontal set point.

[In Heating operation (For Heat-pump model only)]

Use the discharge flap with downward set point.

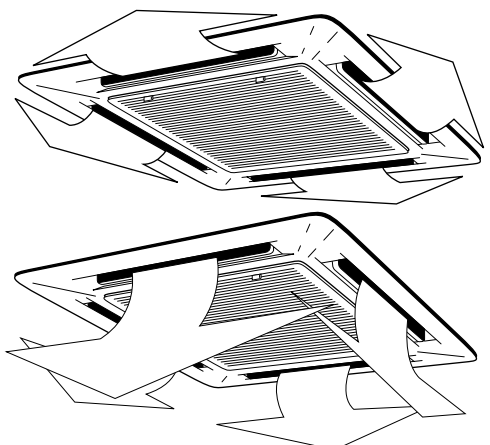


How to set up the air direction

Push  button.

1 Every pushing the button, the air direction changes.


In Heating operation

Set the air outlet flap downward.
If directing it upward, the hot air may not come to the foot.

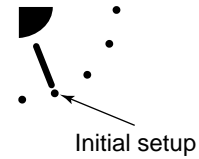




In Cooling / Dry operation

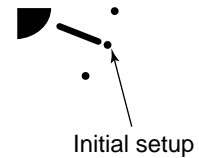Set the air outlet flap upward.
If directing it downward, the dew may fall on near the air discharge port or it drips.




How to start swinging


2 Push  button.
Set direction of the air outlet flap to the lowest position and then push  button again.



- [SWING ] is displayed and the air direction automatically changes upward/downward.
- In case when one remote controller controls the multiple indoor units, each indoor unit can be selected and its air direction can be set up.


How to stop swinging

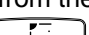3 Push  button again during swinging of the air outlet flap.



- The air outlet flap can be stopped at the desired position. After then the air direction can be again set up from the uppermost position by pushing  button.
- * While the air outlet flap is set downward in cooling/drying operation, it does not stop. If stopping the air outlet flap which directs downward during swinging, it stops after moving to the 3rd position from the top position.

4  UNIT

- To set up the air direction individually, push  button to display each indoor unit No. in a group control. Then set up the air direction to a displayed indoor unit.
- If there is no display, all the indoor units can be operated collectively.
- Every pushing  button, the display exchanges as shown in the figure.

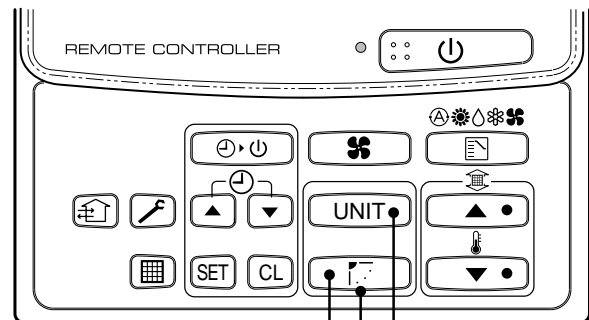

1, 2, 3 ————— **4**

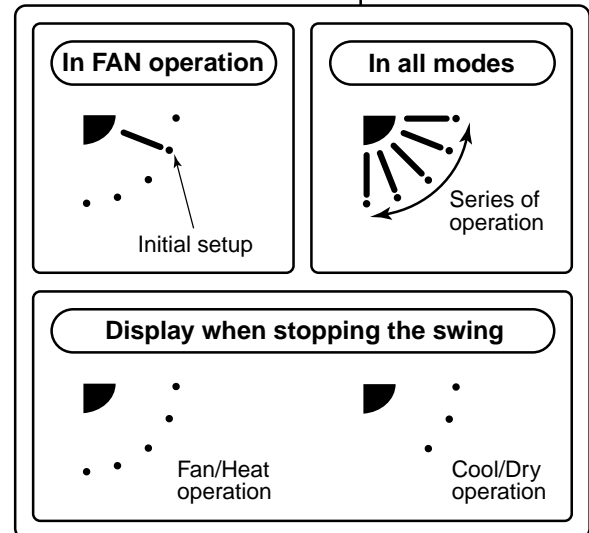

Under Ceiling Type

- While the air conditioner stops, the horizontal flap (Up/Down air direction adjustment plate) automatically directs upward.
- While the air conditioner is in ready status for heating, the horizontal flap (Up/Down air direction adjustment plate) directs upward. The swinging operation starts after heating ready status has been cleared, but “SWING ↷” is displayed on the remote controller even if the status is ready to heating.


How to set up the air direction

Push  button during operation.

1 Every pushing the button, the air direction changes.


In Heating operation

Set the horizontal flap (Up/Down air direction adjustment plate) downward. If directing it upward, the hot air may not come to the foot come to the foot.

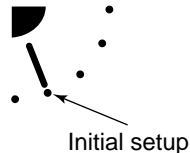

In Cooling / Dry operation

Set the horizontal flap (Up/Down air direction adjustment plate) upward. If directing it downward, the dew may fall on near the air air outlet port or it drips.

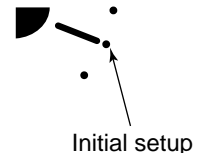

How to start swinging


2 Push  button.


Set direction of the horizontal flap (Up/Down air direction adjustment plate) to the lowest position and then push  button again.

- [SWING ↷] is displayed and the air direction automatically changes upward/downward.

In case when one remote controller controls the multiple indoor units, each indoor unit can be selected and its air direction can be set up.



How to stop swinging


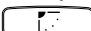
3 Push  button again during swinging of the horizontal flap.

- The horizontal flap can be stopped at the desired position. After then the air direction can be again set up from the uppermost position by pushing  button.

* While the horizontal flap is set downward in cooling/drying operation, it does not stop. If stopping the horizontal flap which directs downward during swinging, it stops after moving to the 3rd position from the top position.


4 

- To set up the air direction individually, push  button to display each indoor unit No. in a group control. Then set up the air direction to a displayed indoor unit.
- If there is no display, all the indoor units can be operated collectively.
- Every pushing  button, the display exchanges as shown in the figure.

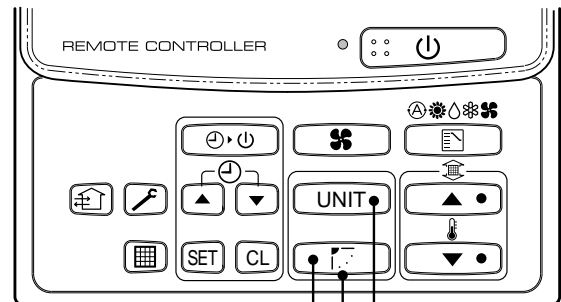

1, 2, 3 — **4**

In FAN operation

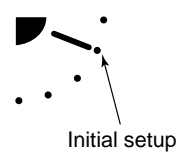


In all modes




Display when stopping the swing



Fan/Heat operation

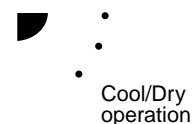


Cool/Dry operation

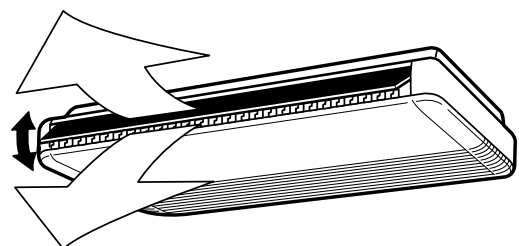

Right/Left air direction adjustment

To change the air outlet direction to right or left side, set the vertical flap inside of the horizontal flap to the desired direction.

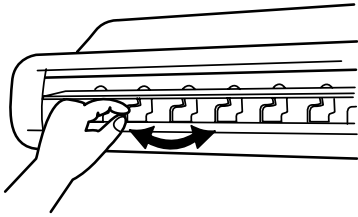

INFORMATION

- If cooling operation is performed with downward discharge, dew may fall on surface of the cabinet or the horizontal flap resulted in dripping.
- If heating operation is performed with horizontal discharge, unevenness of temperature may increase in the room.

High Wall Type


Adjustment of air direction upward/downward

[In Cooling operation]


In cooling operation, use the horizontal flap with horizontal set point so that the cold air diffuses in whole room.

[In Heating operation (For Heat-pump model only)]

In heating operation, use the horizontal flap with downward set point so that the hot air blows at the foot.

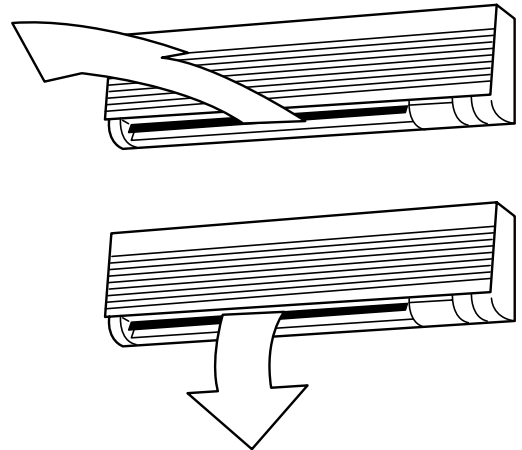


REQUIREMENT

- If cooling operation is performed with downward air outlet, dew may fall on surface of the cabinet or the horizontal flap resulted in dripping.
- If heating operation is performed with horizontal air outlet, unevenness of temperature may increase in the room.
- Do not move the horizontal flap directly with hands; otherwise a trouble is caused. Select direction of the horizontal flap using  switch on the remote controller. The horizontal flap does not stop immediately even if the switch is pushed. Adjusting the stop position, push the switch.


Adjustment of air direction rightward/leftward

To change the air outlet direction to right or left side, set the vertical flap inside of the horizontal flap to the desired direction.

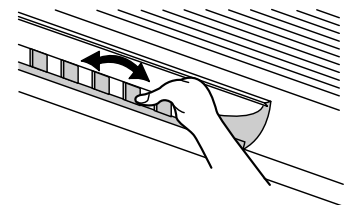

Setup of air direction and swinging


Refer to description of "2-way Air Discharge Cassette Type".

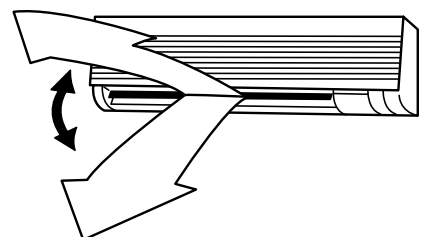

Floor Standing Cabinet Type


[In Cooling operation]

In cooling operation, use the air outlet flap with horizontal set point so that the cold air diffuses in whole room.

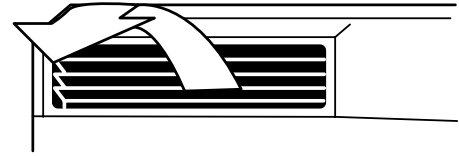

[In Heating operation (For Heat-pump model only)]


In heating operation, use the air outlet flap with downward set point so that the hot air blows at the foot.

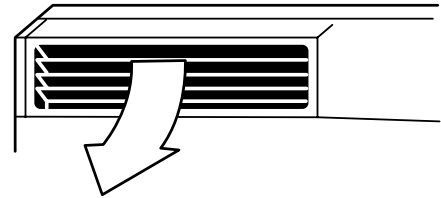

How to change the air outlet port

Change the air outlet port in the following procedure.

- 1** Take off two fixing screws of the air outlet port.
(The fixing screws are reused.)
- 2** Insert the hand into the air outlet port and push up it a little, and then remove the air outlet port from the claw hook at rear side.
- 3** Lift up the air outlet port upward and remove it.
- 4** Reverse the air outlet port and attach it to the main unit.
Pay attention so that four claw hooks (two at rear and lower sides each) are hooked at mounting position.
- 5** Be sure to tighten the air outlet port with the removed fixing screws so that the air outlet port does not come off.

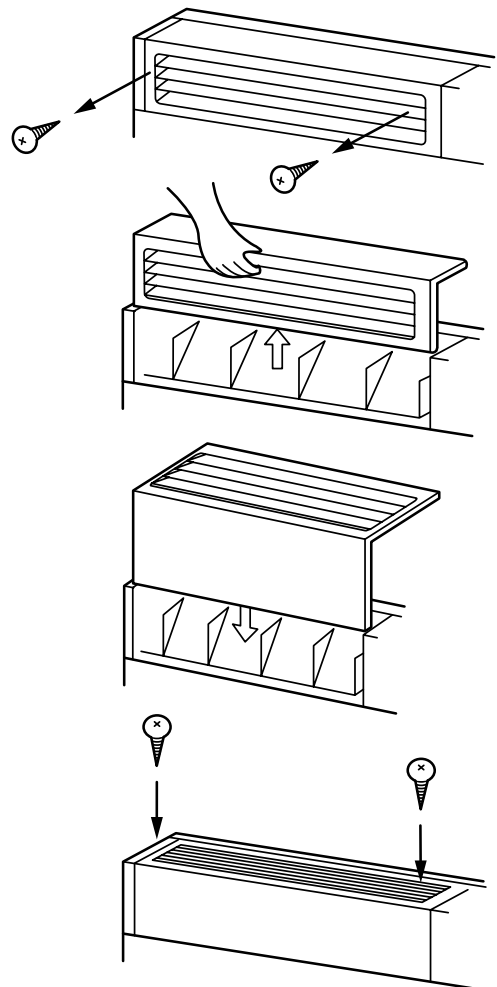

Floor Standing Type


Adjustment of air direction upward/downward

[In Cooling operation]

In cooling operation, move the flap with hands and use it with horizontal air outlet point so that the cold air diffuses in whole room.

[In Heating operation (For Heat-pump model only)]

In heating operation, move the flap with hands and use the horizontal flap with downward set point so that the hot air blows at the foot.

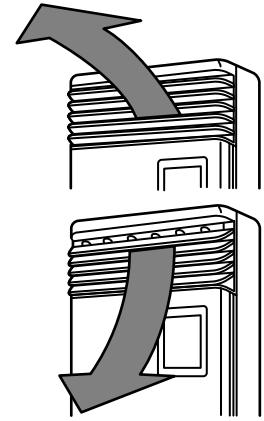


Adjustment of air direction rightward/leftward

[In case of using unsymmetrical air directions]

Lift up the vertical flap lightly, direct it toward the desired direction, and lower it.


In this case, do not use the Swing function.

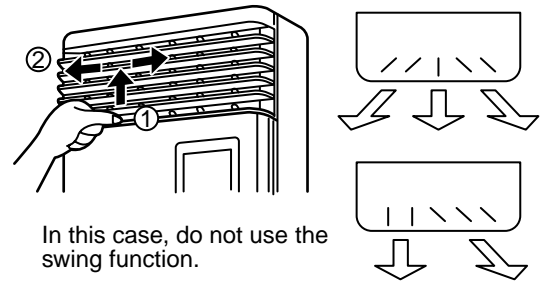

In this case, do not use the swing function.

[In case of automatic swing]

1 Push button during operation.



- [SWING ] is displayed and the air direction automatically changes rightward/leftward.


In case when one remote controller controls the multiple indoor units, each indoor unit can be selected and its air direction can be set up.

2 Push button again during swinging of the horizontal flap.


- The horizontal flap can be stopped at the desired position.

3 Swing button

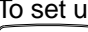

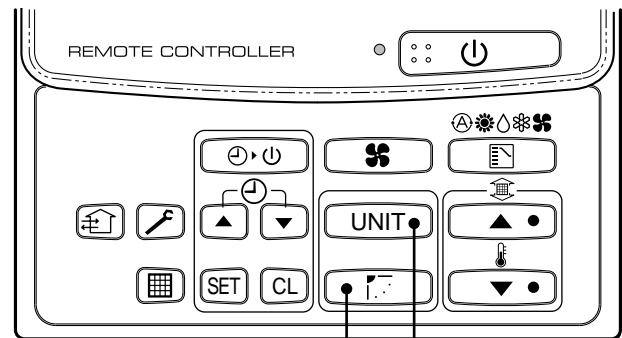- To set up the air direction individually, push  button to display each indoor unit No. in a group control. Then set up the air direction to a displayed indoor unit.
- If there is no display, all the indoor units can be operated collectively.
- Every pushing  button, the display exchanges as shown in the figure.



1, 2 3



INFORMATION

- If cooling operation is performed with downward air outlet, dew may fall on surface of the cabinet or the horizontal flap resulted in dripping.
- If heating operation is performed with horizontal air outlet, unevenness of temperature may increase in the room.
- Do not move the flap directly with hands during swing operation; otherwise a trouble is caused. The vertical flap does not stop immediately even if the  button is pushed. Adjusting the stop position, push the  button.

TIMER OPERATION


A type of timer operation can be selected from the following three types.

OFF timer : The operation stops when the time of timer has reached the set time.


Repeat OFF timer : Every time, the operation stops after the set time has passed.


ON timer : The operation starts when the time of timer has reached the set time.

Timer operation

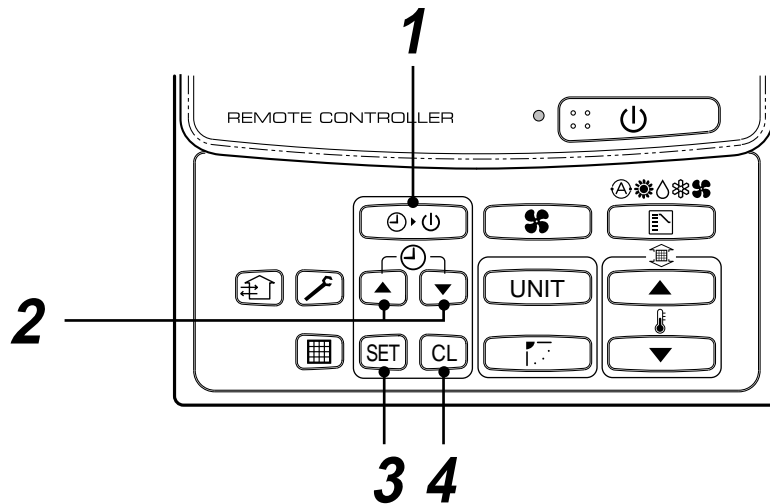


1 Push TIMER SET button.


- The timer display (type) changes for every push of the button.
- SET DATA and  display flashes.

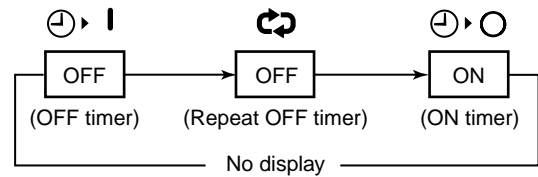

2 Push to select "SET TIME".


For every push of  button, the set time increases in the unit of 0.5 hr (30 minutes).

The maximum set time is 72.0 hr.

For every push of  button, the set time decreases in the unit of 0.5 hr (30 minutes).

The minimum set time is 0.5 hr.

3 Push SET button.

- SET DATA display disappears and  display goes on.


(When ON timer is activated, time is displayed, and after time of the timer has been up, displays other than ON disappear.)

Cancel of timer operation

4 Push CL button.

- TIMER display disappears.

NOTICE

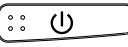- When the operation stops after the timer reached the preset time, the Repeat OFF timer resumes the operation by pushing  button and stops the operation after the time of the timer has reached the set time.

INSTALLATION

Installation location

WARNING

- **Select a location for installation that will be able to safely bear the weight of the unit.**
If the installation location is not strong enough to support the unit and the unit falls, injury could result.

CAUTION

- **Do not install the unit in a location where combustible gases could conceivably leak.**
Leaking gases that accumulate in the vicinity of the unit could be ignited by the unit.

REQUIREMENT

- A location that permits level installation of the unit
- A location that provides enough space to service the unit safely
- A location where water draining from the unit will not pose a problem

Avoid the following types of locations :

- Locations where salt is present in large amounts (seaside areas), or where sulfuric gases are present in large amounts (hot springs areas)
(If the unit is to be used in such areas, special maintenance is necessary.)
- Locations that generate oils (including machine oils), steam, oily smoke, or corrosive gases
- Locations where organic solvents are used
- Locations in the vicinity of equipment that generates high frequency signals
- Locations where the outdoor unit will blow in the direction of a neighbor's window
- Locations where the noise of the outdoor unit will pose a problem
- Locations with poor air circulation

Electric wiring

WARNING

Check that earthing practice is correctly performed.

Grounding is necessary. If earthing practice is incomplete, an electric shock may be caused.

CAUTION

Check the circuit breaker is fitted.

Attaching the earth leakage breaker is necessary. Otherwise, an electric shock may be caused.

Make sure that correct capacity Fuses are used.

Using wire or copper wire may cause a fire or trouble.

For the power supply, use a circuit with rated voltage exclusive for air conditioner.


To disconnect the appliance from the main power supply.

This appliance must be connected to the main power supply by means of circuit breaker or a switch with a contact separation of at least 3mm.

MAINTENANCE

Cleaning of air filter

- When [FILTER] is displayed on the remote controller, maintain the air filter.
- Clogging of air filter decreases cooling/heating effect.

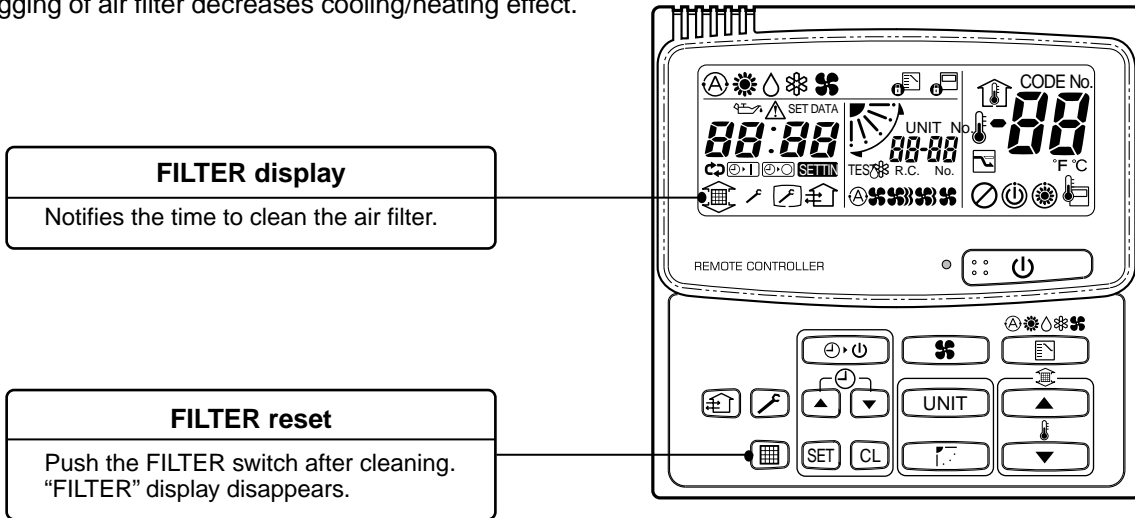

WARNING

Be sure to turn off the main power switch prior to the maintenance.

- **Please do not intend to do the daily maintenance and/or Air Filter cleaning by yourself.**


Cleaning of the air filter and other parts of the air filter involves dangerous work in high places, so be sure to have a service person do it. Do not attempt it yourself.

<Daily maintenance>


- For daily maintenance including Air Filter cleaning, make sure to ask the qualified service person particularly following models;

4-way Air Discharge Cassette Type
 2-way Air Discharge Cassette Type
 1-way Air Discharge Cassette Type


Concealed Duct Type
 Concealed Duct, High Static Pressure Type
 Under Ceiling Type

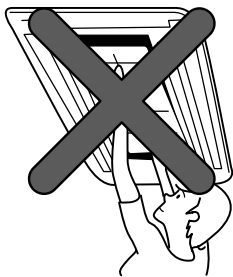


2-way Air Discharge Cassette Type

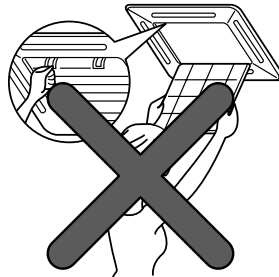


4-way Air Discharge Cassette Type

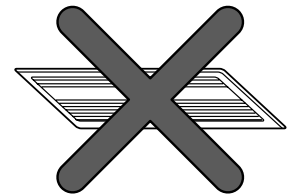


1-way Air Discharge Cassette Type

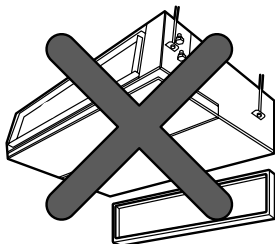

Concealed Duct Type

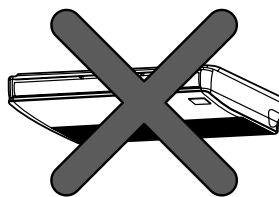


Under Ceiling Type

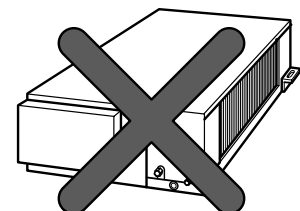

Concealed Duct, High Static Pressure Type



High Wall Type

- Push the projection at the center of air filter. Clip is out.
- Undo the clip of air filter, pull the air filter downward while pushing it toward the main unit side.

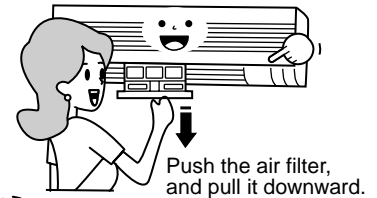

Floor Standing Cabinet Type

- Push down the upper part of the suction port a little, and then pull toward you to remove it.
- Take out the air filter inside of the suction port.

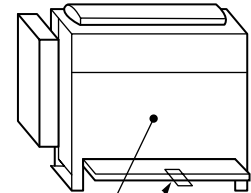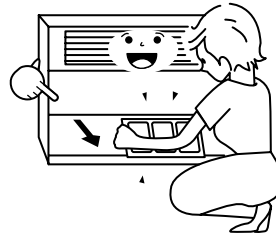

Floor Standing Concealed Type

- Push down hook of the air filter on the front panel (Lower side).
- Pull the air filter toward you to remove it.



Floor Standing Type

Removal / Attachment of air filter

- Pull the air filter toward you.
- To attach the air filter, insert it into the main body and push in it.



NOTE


- For cleaning of air filter, use a cleaner or brush clean. If stain is heavy, it is effective to wash the air filter in tepid water mixed with neutral detergent.
- After washing, rinse it well, and dry it in the shade.
- Install again the air filter which has been cleaned.



Cleaning of main unit / remote controller

CAUTION

- Wipe them with soft and dry cloth.
- A cloth dampened with cold water may be used on the indoor unit if it is very dirty.
- Never use a damp cloth on the main unit and remote controller.
- Do not use a chemically-treated duster for wiping or leave such materials on the unit for long. It may damage or fade the surface of the unit.
- Do not use benzene, thinner, polishing powder, or similar solvents for cleaning. These may cause the plastic surface to crack or deform.

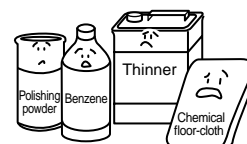

Do not use.


If you do not plan to use the unit for more than 1 month

- (1) Operate the fan for 3 to 4 hours to dry inside the unit
 - Operate "FAN" mode.
- (2) Stop the air conditioner and turn off the main power switch or the circuit breaker.



Checks before operation

- (1) Check that the air filters are installed.
- (2) Check that the air outlet or inlet is not blocked.
- (3) Turn on the main power switch or the circuit breaker for the main power supply to the air conditioner.

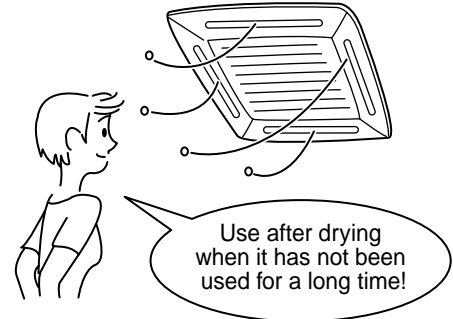

NOTE

For Air conditioning system which is operated regularly, cleaning and maintenance of the indoor/outdoor units are strongly recommended. As a general rule, if an indoor unit is operated for about 8 hours daily, the indoor/outdoor units will need to be cleaned at least once every 3-MONTH. This cleaning and maintenance shall be carried out by a qualified person. Failure to clean the indoor/outdoor units regularly will result in poor performance, icing, water leaking and even compressor failure.

HINTS FOR ECONOMICAL OPERATION

Maintain room temperature at comfortable level

Clean air filters

The clogged air filter impairs the performance of the air conditioner.

Never open doors and windows more often than necessary

To keep cool or warm air in the room, never open doors and windows more often than necessary.




Window curtains

In cooling, close the curtains to avoid direct sunlight.

In heating, close the curtains to keep the heat in.

Get uniform circulation of room air

Adjust the air flow direction for the even circulation of room air.

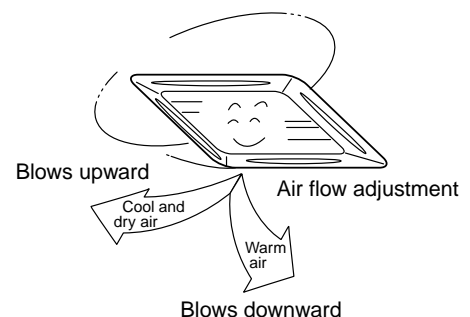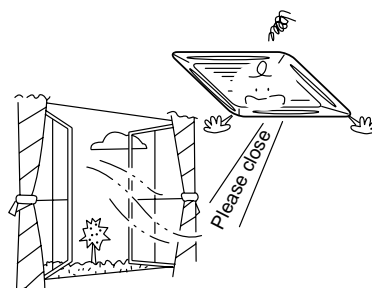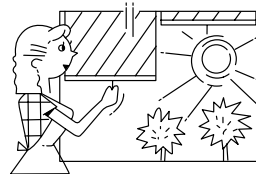

AIR CONDITIONER OPERATIONS AND PERFORMANCE

Check before operation

- Check whether earth wire is disconnected or out of place.
- Check that air filter is installed to the indoor unit.

Heating capacity (for Heat-pump model only)

- For heating, a heat pump system which sucks in outside heat air and discharges it into the room is adopted.
If temperature of the outside air lowers, the heating capacity decreases.
- When temperature of the outside air is low, it is recommended to use other heating equipment together.

Defrost operation during heating operation (for Heat-pump model only)

- If the outdoor unit has some frost during heating operation, the operation mode changes automatically to defrost mode to increase the heating effect (for approx. 2 to 10 minutes).
- During defrost operation, fans of the indoor and the outdoor units stop.

Protection for 3 minutes

- The outdoor unit does not operate for approx. 3 minutes after air conditioner has been immediately restarted after stop, or power switch has been turned on. This is to protect the system.

Main power failure

- If a power failure occurred during the operation, all operations stop.
- When the power is turned on after power failure, the operation lamp of the remote controller flashes to notify.
- When restarting the operation, push ON/OFF button again.

Fan rotation of stopped unit

- While other indoor units operate, the fan on indoor units on “stand-by” rotates to protect the machine once per approx. 1 hour for several minutes.

Protective device (High pressure switch)

The high pressure switch stops the air conditioner automatically when excessive load is applied to the air conditioner.

If the protective device works, the operation lamp keeps lit but the operation stops.

When the protective device works, check characters “△” in the remote controller display part flash.

The protective device may work in the following cases.

Cooling/heating operation of Modular Multi system air conditioner

- When suction or discharge port of the outdoor unit closed.
- When strong wind blows continuously against discharge port of the outdoor unit.
- When dust or dirt is excessively adhered to air filter of the indoor unit.
- When discharge port of the indoor unit is blocked.
- In Modular Multi system air conditioner, each indoor unit can be individually controlled.
However, cooling operation and heating operation cannot be performed concurrently for the indoor units which are connected to one outdoor unit.
When cooling operation and heating operation are performed concurrently, the indoor unit which is performing cooling operation stops, and “Ⓜ” of operation part is lit.
The indoor unit which is performing heating operation continues operation.
If the manager has fixed the setting to COOL or HEAT, other operation than set up one cannot be performed.
When other operation than set up one is performed, “Ⓜ” of operation part is lit and the operation stops.

Characteristics of heating operation (for Heat-pump model only)

- Hot air is not out immediately after the operation has started. After 3 to 5 minutes (differs according to room or outside temperature) has passed and the indoor heat exchanger has been warmed up, hot air blows out.
- During operation, the outdoor unit may stop if outside temperature becomes high.
- When other outdoor unit performs heating operation while the fan is operating, the fan operation may be stopped temporarily to prevent blowing of hot air.

WARNING

Turn on the power switch
12 hours or more before
starting before operation.

Air conditioner operating conditions

For proper performance, operate the air conditioner under the following temperature conditions:

Cooling operation	Outdoor temperature : -5°C to 43°C
	Room temperature : 21°C to 32°C (Dry valve temp.), 15°C to 24°C (Wet valve temp.)
	CAUTION Room relative humidity – less than 80 %. If the air conditioner operates in excess of this figure, the surface of the air conditioner may cause dewing.
Dry operation	Outdoor temperature : 15°C to 43°C (Maximum suction air temp. 46°C)
	Room temperature : 17°C to 32°C
Heating operation	Outdoor temperature : -15°C to 15.5°C (Wet valve temp.)
	Room temperature : 15°C to 28°C (Dry valve temp.)

If air conditioner is used outside of the above conditions, safety protection may work.

RE-INSTALLATION

DANGER

Ask the dealer or an installation professional to re-install the air conditioner to a new place or move it to another place and to observe the following items.

If the air conditioner is inappropriate installed by yourself, it may cause electric shock or fire.

Do not install the air conditioner in the following places

- Do not install the air conditioner in any place within 1 m from a TV, stereo, or radio set. If the unit is installed in such place, noise transmitted from the air conditioner affects the operation of these appliances.
- Do not install the air conditioner near a high frequency appliance (sewing machine or massager for business use, etc.), otherwise the air conditioner may malfunction.
- Do not install the air conditioner in a humid or oily place, or in a place where steam, soot, or corrosive gas is generated.
- Do not install the air conditioner in a salty place such as seaside area.
- Do not install the air conditioner in a place where a great deal of machine oil is used.
- Do not install the air conditioner in a place where it is usually exposed to strong wind such as in seaside area or on the roof or upper floor of a building.
- Do not install the air conditioner in a place where sulfurous gas generated such as in a spa.
- Do not install the air conditioner in a vessel or mobile crane.




Be careful with noise or vibrations

- Do not install the air conditioner in a place where noise by outdoor unit or hot air from its air outlet annoys your neighbors.
- Install the air conditioner on a solid and stable foundation so that it prevents transmission of resonating, operation noise and vibration.
- If one indoor unit is operating, some sound may be audible from other indoor units that are not operating.



WHEN THE FOLLOWING SYMPTOMS ARE FOUND

Check the points described below before asking repair servicing.

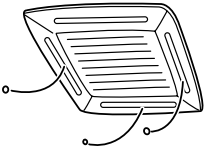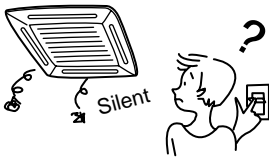		Symptom	Cause
It is not a failure.	Outdoor unit	<ul style="list-style-type: none"> • White misty cold air or water is out. • Sometimes, noise "Pushu !" is heard. 	<ul style="list-style-type: none"> • Fan of the outdoor unit stops automatically and performs defrost operation. • Solenoid valve works when defrost operation starts or finishes.
	Indoor unit	<ul style="list-style-type: none"> • "Swish" sound is heard sometimes. • Slight "Pishi!" sound is heard. • Discharge air smells. • "Ⓜ" indication is lit.  <ul style="list-style-type: none"> • Sound or cool air is output from the stand by indoor unit. • When power of the air conditioner is turned on, "Ticktock" sound is heard. 	<ul style="list-style-type: none"> • When the operation has started, during the operation, or immediately after the operation has stopped, a sound such as water flows may be heard, and the operation sound may become larger for 2 or 3 minutes immediately after the operation has started. They are flowing sound of refrigerant or draining sound of dehumidifier. • This is sound generated when heat exchanger, etc. expand and contract slightly due to change of temperature. • Various smell such as one of wall, carpet, clothes, cigarette, or cosmetics adhere to the air conditioner. • When cooling operation cannot be performed because another indoor unit performs heating operation. • When the manager of the air conditioner has fixed the operation to COOL or HEAT, and an operation contrary to the setup operation is performed. • When fan operation stopped to prevent discharge of hot air. • Since refrigerant is flowed temporarily to prevent stay of oil or refrigerant in the stand by indoor unit, sound of flowing refrigerant, "Kyururu" or "Shaa" may be heard or white steam when other indoor unit operates in HEAT mode, and cold air in COOL mode may be blow-out. • Sound is generated when the expansion valve operates when power has been turned on.
Check again.	Operates or stops automatically.		<ul style="list-style-type: none"> • Is the timer "ON" or "OFF"?
	Does not operate.		<ul style="list-style-type: none"> • Is it a power failure? • Is the power switch turned off? • Is the power fuse or breaker blown? • Has the protective device operated? (The operation lamp goes on.) • Is the timer "ON"? (The operation lamp goes on.) • Are COOL and HEAT selected simultaneously? ("Ⓜ" indication is lit on the display column of the remote controller.)
	Air is not cooled or warmed sufficiently.		<ul style="list-style-type: none"> • Is the suction port or discharge port of the outdoor unit obstructed? • Are any door or window open? • Is the air filter clogged with dust? • Is discharge louver of the indoor unit set at appropriate position? • Is air selection set to "LOW" "MED", and is the operation mode set to "FAN"? • Is the setup temp. the appropriate temperature? • Are COOL and HEAT selected simultaneously? ("Ⓜ" indication is lit on the display column of the remote controller.)

When the following symptoms are found, stop the operation immediately, turn off the power switch, and contact the dealer which you have purchased the air conditioner.


- Activation of switch is unstable.
- The main power fuse often blows out, or circuit breaker is often activated.
- Foreign matters or water entered by mistake.
- When if activation cause of the protective device has been removed, the operation is not performed.
- Other unusual status occurred.

Confirmation and check

When a trouble occurred in the air conditioner, the check code and the indoor unit No. appear on the display part of the remote controller.

The check code is only displayed during the operation.


If the display disappears, operate the air conditioner according to the following "Confirmation of error history" for confirmation.

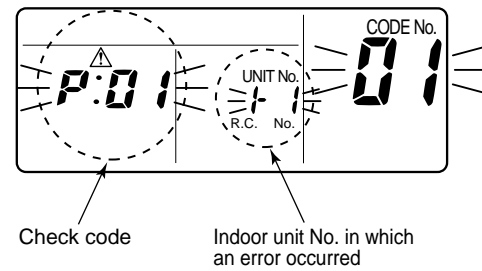





Confirmation of error history

When a trouble occurred on the air conditioner, the trouble history can be confirmed with the following procedure. (The trouble history is stored in memory up to 4 troubles.)

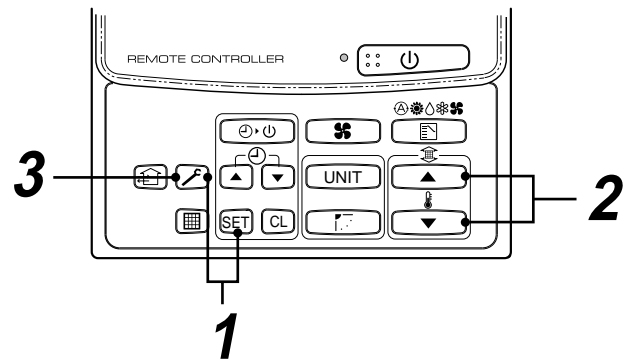The history can be confirmed from both operating status and stop status.

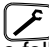

Procedure	Description
1	<p>When pushing SET and  buttons at the same time for 4 seconds or more, the following display appears.</p> <p>If [Service check] is displayed, the mode enters in the trouble history mode.</p> <ul style="list-style-type: none"> • [01 : Order of trouble history] is displayed in CODE No. window. • [Check code] is displayed in CHECK window. • [Indoor unit address in which an error occurred] is displayed in UNIT No.
2	<p>Every pushing of [ , ] button used to set temperature, the trouble history stored in memory is displayed in order.</p> <p>The numbers in CODE No. indicate CODE No. [01] (latest) → [04] (oldest).</p> <p>CAUTION</p> <p>Do not push CL button because all the trouble history of the indoor unit will be deleted.</p>
3	<p>After confirmation, push  button to return to the usual display.</p>

1. Check the troubles according to the above procedure.
2. Ask an authorized dealer or qualified service (maintenance) professional to repair or maintain the air conditioner.
3. More details of the service code are explained in Service Manual.

TOSHIBA CARRIER CORPORATION

2 CHOME 12-32, KONAN, MINATOKU, TOKYO, 108-0075, JAPAN